
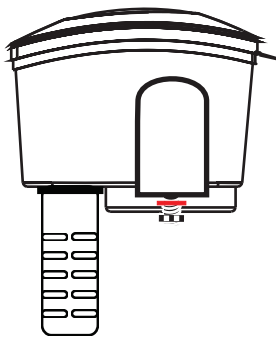


INSTRUCTIONS & EASY SET UP GUIDE

1. Remove from carton and put filter off to the side for now
2. Clean the lid, upper blue container and pitcher with liquid mild detergent soap. **DO NOT PUT IN DISHWASHER.** Dry with a soft cloth.
3. Remove filter from packaging. Remove wing nut from filter stem. Leave washer on stem. While holding plastic base of filter with one hand, place under running cool tap water and rinse for 2 minutes. **DO NOT PLACE STEM OF FILTER UP TO THE FAUCET.**
4. Insert stem through hole in upper blue container. Attach wing nut to filter stem on **BOTTOM** side of upper blue container. Tighten wing nut. **DO NOT** over tighten.
5. Insert upper blue container into pitcher
6. Fill upper blue container with cool tap water and insert lid
First cycle of water will take longer as filter conditioning process takes place. (As with any gravity filter, water will drip-drip-drip into the water storage area)
7. **Discard the first two cycles of filtered water**
8. You are now ready to use
9. To remove fruit infusion tube, simply turn counter clockwise to unscrew. Place slices of your favorite fruit or vegetable into the infusion tube up to the top of the horizontal slits. Reattach the infusion tube by turning clockwise until secure on the bottom of the blue water container.
10. Insert upper blue container back into pitcher.
11. Fill upper blue container with cool water
12. Insert lid and allow water to filter through before use

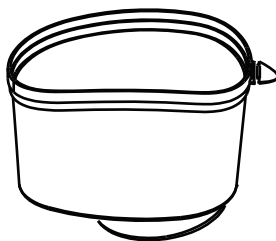

IMPORTANT INFORMATION

1. **DO NOT USE** with carbonated drinks, milk, coffee, tea or other similar liquids. Doing so may reduce or destroy filter properties
2. **DO NOT USE** in a microwave, heat on a stove or place in a freezer
3. **DO NOT** place in a dishwasher
4. **DO NOT USE** with hot or salt water
5. **DO NOT USE** soap for cleaning filter element
6. Replacement filters are sold separately
7. OK to store pitcher in refrigerator

How do I clean my ProOne® G2.0M filter element?

Remove the filter from the upper blue container by removing the wing nut. While holding the threaded stem, place the filter under running water or in a bowl of water and scrub the surface using the dark green side of the scrubby sponge included. Always scrub away from the threaded stem end of the filter. Rinse and re-assemble the filter as detailed in the instructions above. Never wash the filter with cleaning detergents or soap.

How do I know when to change my filter?

Should you notice a difference in the taste of your water and/or a slow down in the flow rate, may be an indication your filter needs to be cleaned or if you've cleaned a few times, may indicate your filter needs to be replaced.

ProOne®
WATER PITCHER

FOR TECHNICAL SUPPORT PLEASE CALL 1-800-544-3533