



## ProMax™ Filter Cartridge Replacement

1. Unscrew the shower filter assembly from the shower arm by turning counter clockwise.
  2. Unscrew the filter housing by placing one hand on top and the bottom portion of the filter housing as shown in image(e).
  3. Remove the cartridge. Make sure O-rings inside of filter housing remain seated in O-ring grooves. Top of housing(f) fits (2) O-rings. Bottom of housing(g) fits (1) O-ring.
  4. Replace with new cartridge. **NOTE:** Screen mesh end must be facing up towards shower arm.
  5. Screw housing back together.
  6. Replace Teflon tape on shower arm. Reattach housing onto shower arm by turning clockwise. **NOTE:** Filter cartridge is NOT reversible
- \* Recommended filter replacement is every 6-9 months.

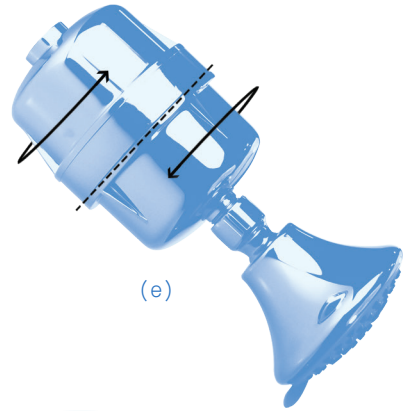

(e)

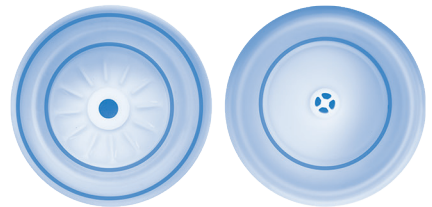

(f)

(g)

## Troubleshooting

If there is leakage between the two housings, try tightening both housings. Check the O-rings to make sure they are seated in their proper grooves. The O-rings may need to be lubricated with food grade silicone lubricant. When reinserting o-rings, turn o-ring upside down before inserting into corresponding groove.